

+5	+5	GND	GND	GND	RMCD	RMAK	RMAX	GND	LABLE	
WHT & ORN	RED & TAN	SHIELD OF BLU	SHIELD OF BLK	SHIELD OF YEL	PINK IN BLU	WHT IN BLK	DINK IN YEL	SHIELD	COLOR	
7	3	٩	4	6	œ	Ŋ	2	1	P ₁	
7/1	N/U	٩	4	6	œ	ሳ	2	1	P2	
7	u	9	4	6	œ	O	2	-	P3	

NOTES:

I. SHRINK TUBE OVER SHIELD BREAK-OUT PC

2. PUT STRAIN RELIEF'S BEFORE STRIPPING

3. CLAMP CABLE INSID


4. INSIDE RUBBER SLE CABLE BUTT UP AGE

* 5. CUT TUBE TO HALI SHELL

MAKE SURE INSULATOR IS INC BLA

MERG WIRES OUT PLACE INSIDE JUNCTION. SHRINK TUBE 0

8. ALL SHIELDS HSIDE THE CAZ SHE

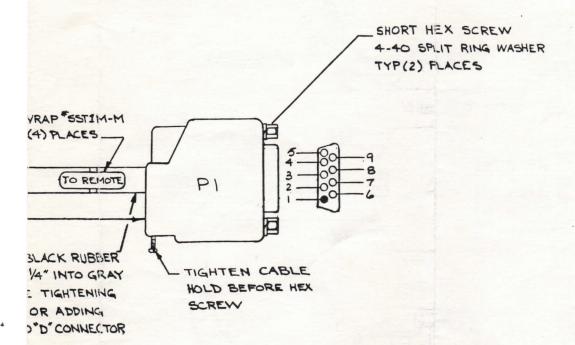

JBE OVER SOLDER JOINTS AND EAK-OUT POINTS BOTH ENDS IN RELIEF'S ON WITH TALC POWER TRIPPING CABLE I"(P2) END ONLY IBLE INSIDE JAE CONNECTOR (P3) JBBER SLEEVE JACKETING OF JUTT UP AGAINST SHELL NOT INSIDE

LIP
SURE BLACK RUBBER CABLE
OR IS INSIDE CONNECTOR
VIRES OUTSIDE OF CONNECTOR (P3)
NSIDE OF RUBBER JACKET
TUBE AND TY-WRAP CABLE
ON.

ELDS CAN BE TIED TOGETHER THE SHELL OR TUBING

			-						
1.	MINITURE CAMERA CABLE		2'	MOGAMI	2673				
РЗ	TY-WEAP		2		PLM1M				
PI/P2	TY-WRAT		4		SST1M-M				
P3	STRAIN RELI	EF	1	AMPHENOL	9779-513-8				
P2	STRAIN RELI	EF	1	AMPHENOL	9779-513-4				
P3	SHELL		1	SOURIAU	8630-3637 BLACK				
РЗ	PLUG		١	JAE	DEPP				
P2	SHELL LOCKING		1	JAE	DE-C4-16-51				
P2	PLUG		١	JAE	DEPP				
PI	SHORT HEX SCREW 4/40		2	2	GM3750-08-ZC				
PI	SPLIT RING WASHER		2	2	* 4 SIZE				
PI	SHELL		1	TRW	DE51218-1				
PI	SOCKET		1	JAE	DE95				
ITEM	DESCRIPTION		YTP	MFG	PART	NO.			
BILL OF MATERIAL									
ADAMS · SMITH									
SGUARD ZETA			12	REY REY					
ASSEMBLY ADD ONE-Y EXPANDER									
APPROVED C.8807-0004 REV -2									

ADD ONE Y INSTALLATION GUIDE

The add one Y connector is used to interconnect Zeta Threes for serial data communication with the Zeta Remote Autologator/Controller. To use multiple Zeta Threes in a system:

1. Select incremental system addresses in Zeta Menu for each additional Zeta Three

First Zeta Three is "master" Zeta sys addr = 0 (level 0) Second Zeta Three is "slave" Zeta sys addr = 1 (level 1) Third Zeta Three is "slave" Zeta sys addr = 2 (level 2) Fourth Zeta Three is "slave" Zeta sys addr = 3 (level 3) etc...

2. Connect the Y adaptor to both Zeta Three Remote connectors and Remote cable.

Master Y end connects to "Remote" Zeta Three system address N Slave Y end connects to "Remote" Zeta Three system address N+1 To Remote connects to Remote cable (remember to tighten the screws on each connector)

- 3. Select Copy Mode = XFER and TC Copy = ZETATIME in Generator menu.
- 4. Select ZETATIME = Master in Zeta menu.
- 5. Connect Generator TC OUT of Zeta N to Master TC IN of Zeta N+1.
- 6. Run Zeta Three Generator in Copy (Shift/Gen Run) to link additional Zeta Threes
- 7. Enable Master on each additional Zeta Three to link Generator and Master TC Reader.